

**FIDLOCK.**

# Snap Add On Assembly



# Part overview



Tool 4  
Plastic pliers for holding the SNAP male front section.



Tool 3



Snap female S screw low # 05100



Snap male S screw low # 05010



Snap male S add on # 05003

Snap male S screw low  
# 05010




Cap Part



Magnet Housing





Snap male S add on  
# 05003

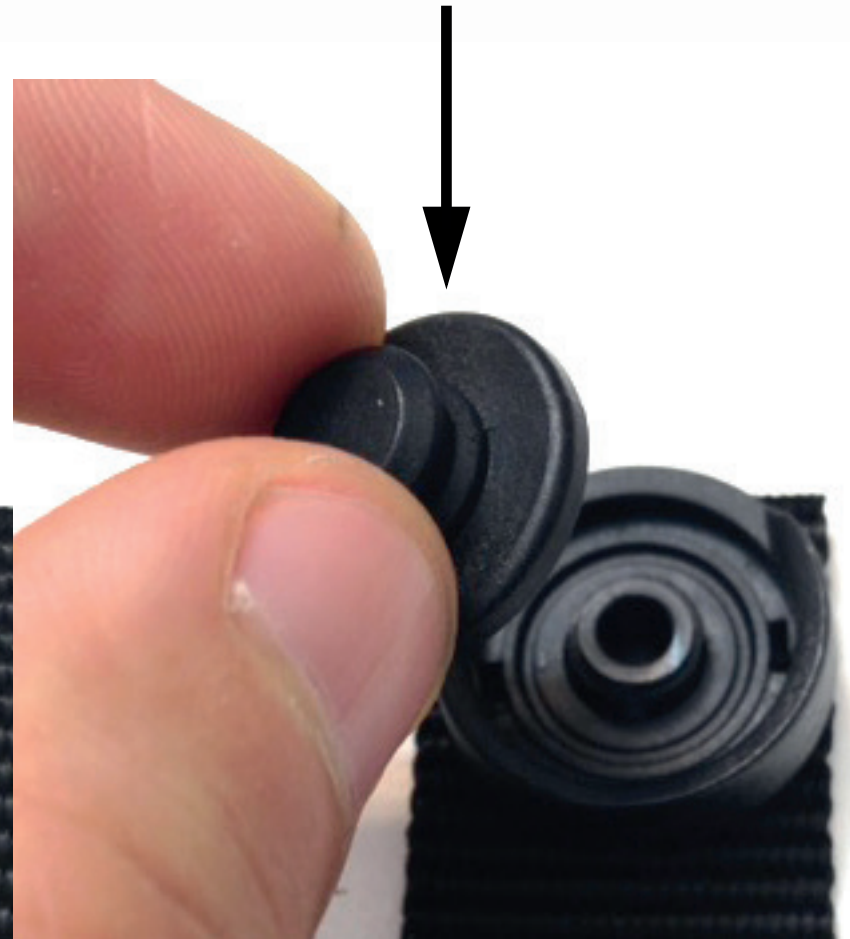

# Fixing male part

Tool 4  
Plastic pliers for holding the  
SNAP male front section.

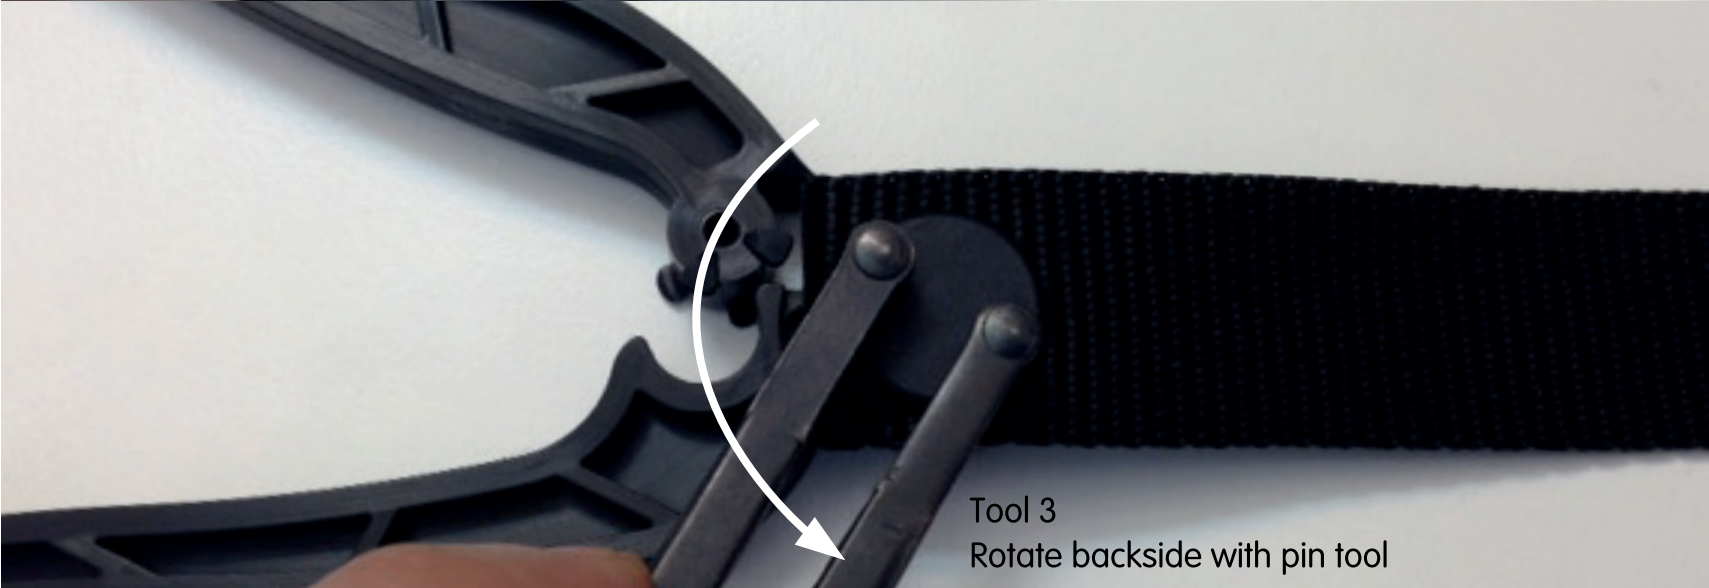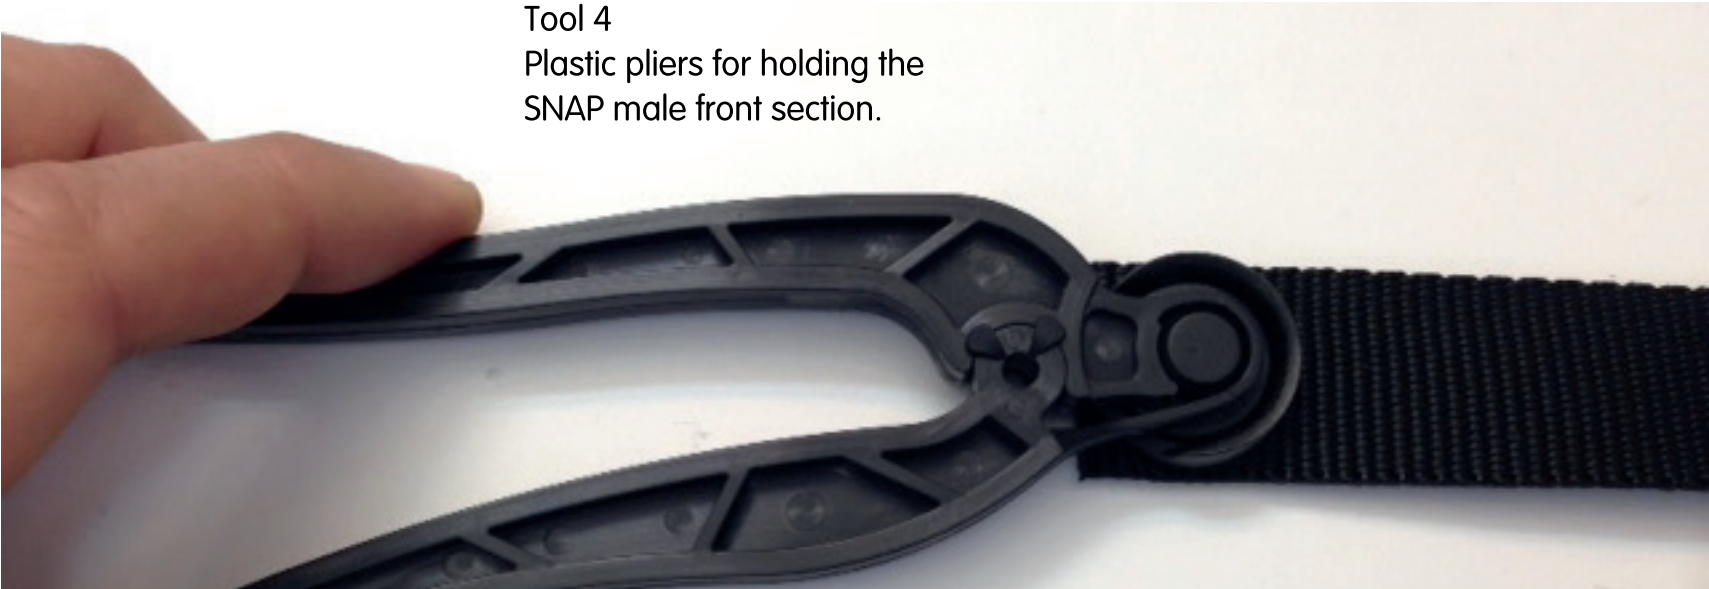

Tool 3  
Rotate backside with pin tool



# Orientation of female and male part

The opening of Add On part should be face to top side.



Place female part with opening to top side.



Snap female S screw low  
# 05100

Alternative female products:

Article number: 05200

Article number: 05450

Article number: 05300

Article number: 05103

Close by putting male part on top of female part.



# Unlock Add On part and separate

Rotate belt by 180°



Pull belt in top side

